



Robert Bosch GmbH

Power Tools Division 70745 Leinfelden-Echterdingen Germany

www.bosch-pt.com

2 609 140 935 (2012.02) 0 / 16 **XXX**



Professional **TSR**

1080-LI|1440-LI|1800-LI



BOSCH


en Original instructions

cn 正本使用说明书

 






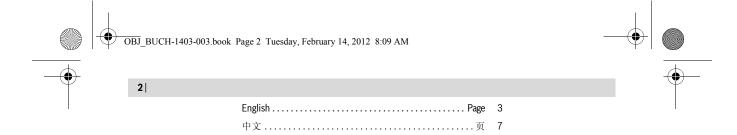















General Power Tool Safety Warnings

AWARNING

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mainsoperated (corded) power tool or battery-operated (cordless) power tool.

Work area safety

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- ➤ Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical safety

- ➤ Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- ➤ Do not expose power tools to rain or wet conditions.

 Water entering a power tool will increase the risk of electric shock
- ➤ Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges and moving parts. Damaged or entangled cords increase the risk of electric shock.
- ➤ When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- ► If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

Personal safety

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- ▶ Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- ► Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- ➤ Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- ➤ Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

Power tool use and care

- ➤ Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- ➤ Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- ▶ Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- ► Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- ► Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

Battery tool use and care

➤ Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

Bosch Power Tools 2 609 140 935 | (14.2.12)



























- ▶ Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- ▶ When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- ▶ Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

► Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

Safety Warnings for Drills and Screw-

- ▶ Hold power tool by insulated gripping surfaces, when performing an operation where the cutting accessory or fastener may contact hidden wiring. Cutting accessory and fasteners contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.
- ▶ Use auxiliary handle(s), if supplied with the tool. Loss of control can cause personal injury.
- Use appropriate detectors to determine if utility lines are hidden in the work area or call the local utility company for assistance. Contact with electric lines can lead to fire and electric shock. Damaging a gas line can lead to explosion. Penetrating a water line causes property dam-
- ▶ Switch off the power tool immediately when the tool insert jams. Be prepared for high reaction torque that can cause kickback. The tool insert jams when:
- the power tool is subject to overload or
- it becomes wedged in the workpiece.
- ▶ Hold the machine with a firm grip. High reaction torque can briefly occur while driving in and loosening screws.
- ► Secure the workpiece. A workpiece clamped with clamping devices or in a vice is held more secure than by hand.
- ▶ Always wait until the machine has come to a complete stop before placing it down. The tool insert can jam and lead to loss of control over the power tool.
- ▶ Do not open the battery. Danger of short-circuiting.



Protect the battery against heat, e.g., against continuous intense sunlight, fire, water, and moisture. Danger of explosion.

▶ In case of damage and improper use of the battery, vapours may be emitted. Provide for fresh air and seek medical help in case of complaints. The vapours can irritate the respiratory system.

- ▶ Use the battery only in conjunction with your Bosch power tool. This measure alone protects the battery against dangerous overload.
- ▶ Use only original Bosch batteries with the voltage listed on the nameplate of your power tool. When using other batteries, e. g. imitations, reconditioned batteries or other brands, there is danger of injury as well as property damage through exploding batteries.

Additional Safety and Working Instructions

- ▶ Dusts from materials such as lead-containing coatings, some wood types, minerals and metal can be harmful to one's health and cause allergic reactions, lead to respiratory infections and/or cancer. Materials containing asbestos may only be worked by specialists.
 - Provide for good ventilation of the working place.
- It is recommended to wear a P2 filter-class respirator. Observe the relevant regulations in your country for the materials to be worked.
- ▶ Prevent dust accumulation at the workplace. Dusts can easily ignite.
- ▶ Before any work on the machine (e.g., maintenance, tool change, etc.) as well as during transport and storage, set the rotational direction switch to the centre position. Unintentional actuation of the On/Off switch can lead to injuries.
- ► The battery is supplied partially charged. To ensure full battery capacity, completely charge the battery in the battery charger before using for the first time.
- ► The battery is equipped with a NTC temperature control which allows charging only within a temperature range of between 0 °C and 45 °C. A long battery service life is achieved in this manner.
- ▶ Read the operating instructions of the battery charger.
- ▶ Apply the power tool to the screw only when it is switched off. Rotating tool inserts can slip off.
- ► Adjust the gear switch only when the machine is at a complete stop.
- ► Always push the gear selector and turn the operating mode selector switch through to the stop. If the gear selector cannot be pushed through to the stop, briefly press the On/Off switch. Otherwise, the machine can become damaged.

Symbols

The following symbols are important for reading and understanding the operating instructions. Please take note of the symbols and their meaning. The correct interpretation of the symbols will help you to use the machine in a better and safer manner.



2 609 140 935 | (14.2.12) Bosch Power Tools

















English | 5









TSR 1080-LI/TSR 1440-LI/ TSR 1800-LI: Cordless Drill/Driver Grey-marked area: Handle (insulated gripping surface)

воѕсн	•
X X	XX XXX XXX
	_

Article number



Read all safety warnings and all instruc-



Before any work on the machine itself, remove the battery



Wear ear protection.



Movement direction



Reaction direction



Drilling and screwdriving



Low speed



High speed

Symbol	Meaning
I	Switching On
0	Switching Off
*	Right/left rotation
U	Rated voltage
n ₀ 1	No-load speed (1. gear)
n ₀ 2	No-load speed (2. gear)
M	Maximum torque according to ISO 5393
B	Metal
	Wood
Ø	Drilling diameter, max.
Ø	Max. screw dia.
	Chuck clamping range
i	Weight according to EPTA-Procedure 01/2003

Delivery Scope

Cordless Drill/Driver.

Battery, application tools and other accessories shown or described are not part of the standard delivery scope.

A complete overview of accessories can be found in our accessories program.

Intended Use

The machine is intended for driving in and loosening screws as well as for drilling in wood, metal, ceramic and plastic.

Technical Data

The technical data of the machine are listed in the table on page 11.

Mounting and Operation

Action	Figure	Page
Removing the Battery	1	12
Inserting the Battery	2	12
Mounting application tools	3	12
Reversing the Rotational Direction	4	13
Setting the Torque	5	13
Selecting the drilling position	6	14
Gear Selection, Mechanical	7	14
Switching On and Off	8	14
Selecting accessories	-	15



Bosch Power Tools 2 609 140 935 | (14.2.12)























Maintenance and Cleaning

► For safe and proper working, always keep the machine and ventilation slots clean.

After-sales Service and Customer Assistance

Our after-sales service responds to your questions concerning maintenance and repair of your product as well as spare parts. Exploded views and information on spare parts can also be found under:

www.bosch-pt.com

Our customer service representatives can answer your questions concerning possible applications and adjustment of products and accessories.

In all correspondence and spare parts order, please always include the 10-digit article number given on the type plate of the machine

People's Republic of China

China Mainland

Bosch Power Tools (China) Co., Ltd. 567, Bin Kang Road
Bin Jiang District 310052
Hangzhou, P.R. China
Service Hotline: 400 826 8484
Fax: +86 571 8777 4502
E-Mail: contact.ptcn@cn.bosch.com
www.bosch-pt.com.cn

HK and Macau Special Administrative Regions

Robert Bosch Hong Kong Co. Ltd. 21st Floor, 625 King's Road North Point, Hong Kong Customer Service Hotline: +852 2101 0235

Fax: +852 2590 9762 E-Mail: info@hk.bosch.com www.bosch-pt.com.hk

Indonesia

PT. Multi Mayaka Kawasan Industri Pulogadung Jalan Rawa Gelam III No. 2 Jakarta 13930 Indonesia

Tel.: +62 (21) 46 83 25 22 Fax: +62 (21) 46 82 86 45/68 23 E-Mail: sales@multimayaka.co.id www.bosch-pt.co.id

Philippines

Robert Bosch, Inc.
28th Floor Fort Legend Towers,
3rd Avenue corner 31st Street,
Fort Bonifacio Global City,
1634 Taguig City, Philippines
Tel.: +63 (2) 870 3871
Fax: +63 (2) 870 3870
matheus.contiero@ph.bosch.com
www.bosch-pt.com.ph

Bosch Service Center: 9725-27 Kamagong Street San Antonio Village Makati City, Philippines Tel.: +63 (2) 899 9091 Fax: +63 (2) 897 6432 rosalie.dagdagan@ph.bosch.com

Malavsia

Robert Bosch (S.E.A.) Sdn. Bhd. No. 8A, Jalan 13/6 G.P.O. Box 10818 46200 Petaling Jaya Selangor, Malaysia Tel.: +60 (3) 7966 3194 Fax: +60 (3) 7958 3838 cheehoe.on@my.bosch.com Toll-Free: 1800 880 188 www.bosch-pt.com.my

Thailand

Robert Bosch Ltd.
Liberty Square Building
No. 287, 11 Floor
Silom Road, Bangrak
Bangkok 10500
Tel.: +66 (2) 6 31 18 79 – 18 88 (10 lines)
Fax: +66 (2) 2 38 47 83
Robert Bosch Ltd., P. O. Box 2054
Bangkok 10501, Thailand

Bosch Service – Training Centre 2869-2869/1 Soi Ban Kluay Rama IV Road (near old Paknam Railway) Prakanong District 10110 Bangkok

Tel.: +66 (2) 6 71 78 00 – 4 Fax: +66 (2) 2 49 42 96 Fax: +66 (2) 2 49 52 99

Singapore

Thailand

Robert Bosch (SEA) Pte. Ltd. 11 Bishan Street 21 Singapore 573943 Tel.: +65 6571 2772 Fax: +65 6350 5315 leongheng.leow@sg.bosch.com Toll-Free: 1800 333 8333 www.bosch-pt.com.sg

Vietnam

Robert Bosch Vietnam Co. Ltd 10/F, 194 Golden Building 473 Dien Bien Phu Street Ward 25, Binh Thanh District 84 Ho Chi Minh City Vietnam

Tel.: +84 (8) 6258 3690 ext. 413 Fax: +84 (8) 6258 3692 hieu.lagia@vn.bosch.com www.bosch-pt.com

2 609 140 935 | (14.2.12) Bosch Power Tools



















中文 | 7







Robert Bosch Australia Ptv. Ltd. Power Tools Locked Bag 66 Clayton South VIC 3169 **Customer Contact Center** Inside Australia:

Phone: +61 (01300) 307 044 Fax: +61 (01300) 307 045 Inside New Zealand:

Phone: +64 (0800) 543 353 Fax: +64 (0800) 428 570 Outside AU and NZ: Phone: +61 (03) 9541 5555 www.bosch.com.au

Transport

The contained lithium-ion batteries are subject to the Dangerous Goods Legislation requirements. The user can transport the batteries by road without further requirements. When being transported by third parties (e.g.: air transport or

forwarding agency), special requirements on packaging and labelling must be observed. For preparation of the item being shipped, consulting an expert for hazardous material is re-

Dispatch batteries only when the housing is undamaged. Tape or mask off open contacts and pack up the battery in such a manner that it cannot move around in the packaging. Please also observe possibly more detailed national regula-

Disposal



The machine, rechargeable batteries, accessories and packaging should be sorted for environmentalfriendly recycling.

Do not dispose of power tools and batteries/rechargeable batteries into household waste!

Batteries no longer suitable for use can be directly returned

Great Britain

Robert Bosch Ltd. (B.S.C.) P.O. Box 98 Broadwater Park North Orbital Road Denham Uxbridge UB 9 5HJ Tel. Service: +44 (0844) 736 0109

Fax: +44 (0844) 736 0146 E-Mail: boschservicecentre@bosch.com

Subject to change without notice.

中文

电动工具通用安全警告

阅读所有警告和所有说明!不遵照以下警告 和说明会导致电击、着火和/或严重伤害。

保存所有警告和说明书以备查阅。

在所有下列的警告中术语"电动工具"指市电驱动 (有 线) 电动工具或电池驱动 (无线) 电动工具。

工作场地的安全

- ▶ **保持工作场地清洁和明亮。**混乱和黑暗的场地会引发 事故。
- ▶ 不要在易爆环境,如有易燃液体、气体或粉尘的环境 下操作电动工具。电动工具产生的火花会点燃粉尘或
- ▶ **让儿童和旁观者离开后操作电动工具。**注意力不集中 会使你失去对工具的控制。

电气安全

- ▶ 电动工具插头必须与插座相配。绝不能以任何方式改 装插头。需接地的电动工具不能使用任何转换插头。 未经改装的插头和相配的插座将减少电击危险。
- ▶ 避免人体接触接地表面,如管道、散热片和冰箱。如 果你身体接地会增加电击危险。
- ▶ **不得将电动工具暴露在雨中或潮湿环境中。**水进入电 动工具将增加电击危险。
- 不得滥用电线。绝不能用电线搬运、拉动电动工具或 拔出其插头。使电线远离热源、油、锐边或运动部 件。受损或缠绕的软线会增加电击危险。
- ▶ 当在户外使用电动工具时,使用适合户外使用的外接 软线。适合户外使用的软线将减少电击危险。
- ▶ 如果在潮湿环境下操作电动工具是不可避免的,应使 用剩余电流动作保护器 (RCD)。使用 RCD 可减小 电击危险。

人身安全

- ▶ 保持警觉,当操作电动工具时关注所从事的操作并保 持清醒。当你感到疲倦,或在有药物、酒精或治疗反 **应时,不要操作电动工具。**在操作电动工具时瞬间的 疏忽会导致严重人身伤害。
- ▶ **使用个人防护装置。始终佩戴护目镜。**安全装置,诸 如适当条件下使用防尘面具、防滑安全鞋、安全帽、 听力防护等装置能减少人身伤害。
- ▶ 防止意外起动。确保开关在连接电源和/或电池盒、 **拿起或搬运工具时处于关断位置。**手指放在已接通电 源的开关上或开关处于接通时插入插头可能会导致危 险。

























8 中文

- ▶ 在电动工具接通之前,拿掉所有调节钥匙或扳手。遗 留在电动工具旋转零件上的扳手或钥匙会导致人身伤
- ▶ 手不要伸展得太长。时刻注意立足点和身体平衡。 样在意外情况下能很好地控制电动工具。
- ▶ 着装适当。不要穿宽松衣服或佩戴饰品。让你的衣 **服、手套和头发远离运动部件。**宽松衣服、佩饰或长 发可能会卷入运动部件中。
- ▶ 如果提供了与排屑、集尘设备连接用的装置,要确保 **他们连接完好且使用得当。**使用这些装置可减少尘屑 引起的危险。

电动工具使用和注意事项

- ▶ 不要滥用电动工具,根据用途使用适当的电动工具。 选用适当设计的电动工具会使你工作更有效、更安
- ▶ 如果开关不能接通或关断工具电源,则不能使用该电 动工具。不能用开关来控制的电动工具是危险的且必 须讲行修理。
- ▶ 在进行任何调节、更换附件或贮存电动工具之前,必 须从电源上拔掉插头和 / 或使电池盒与工具脱开。这 种防护性措施将减少工具意外起动的危险。
- ▶ 将闲置不用的电动工具贮存在儿童所及范围之外,并 且不要让不熟悉电动工具或对这些说明不了解的人操 作电动工具。电动工具在未经培训的用户手中是危险
- ▶ 保养电动工具。检查运动件是否调整到位或卡住,检 查零件破损情况和影响电动工具运行的其他状况。如 **有损坏,电动工具应在使用前修理好。**许多事故由维 护不良的电动工具引发。
- ▶ 保持切削刀具锋利和清洁。保养良好的有锋利切削刃 的刀具不易卡住而且容易控制。
- ▶ 按照使用说明书,考虑作业条件和进行的作业来使用 **电动工具、附件和工作头等。**将电动工具用于那些与 其用途不符的操作可能会导致危险。

电池式工具使用和注意事项

2 609 140 935 | (14.2.12)

- ▶ **只用制造商规定的充电器充电。**将适用于某种电池盒 的充电器用到其他电池盒时会发生着火危险。
- ▶ 只有在配有专用电池盒的情况下才使用电动工具。使 用其他电池盒会发生损坏和着火危险。
- ▶ 当电池盒不用时,将它远离其他金属物体,例如回形 针、硬币、钥匙、钉子、螺钉或其他小金属物体,以 防一端与另一端连接。电池端部短路会引起燃烧或火 灾。
- ▶ 在滥用条件下,液体会从电池中溅出;避免接触。如 果意外碰到了,用水冲洗。如果液体碰到了眼睛,还 要寻求医疗帮助。从电池中溅出的液体会发生腐蚀或 燃烧。

维修

▶ 将你的电动工具送交专业维修人员,使用同样的备件 进行修理。这样将确保所维修的电动工具的安全性。

针对电钻和电动扳手的安全规章

- ▶ 安装在机器上的工具或螺丝如果可能割断隐藏的 电 **线,一定要按住绝缘手柄操作电动工具。**电动工具如 果割断了带电的电线,机器上的金属部件会导电,并 进而导致操作者触电。
- ▶ **如果电动工具提供了辅助手柄便要使用它。**操作时失 控可能导致伤害。
- ▶ 使用合适的侦测器,以便找出隐藏著的电源线的位 **置。或者向当地的供电单位索取相关资料。**钻穿电线 会造成火灾並遭受电击。损坏瓦斯管会引起爆炸。如 果水管被刺穿了会导致财物损失。
- ▶ 如果安装在机器上的工具被夹住了,必须马上关闭电 动工具並保持镇静。此时机器会产生极高的反应力 **矩,並进而造成回击。**安装在机器上的工具容易被夹 住如果,
 - 电动工具超荷了,或者
 - 安装在机器上的工具在工件中歪斜了。
- ▶ **务必握紧电动工具。**在拧紧和放松螺丝时,可能出现 短暂的强大反击。
- ▶ **固定好工件。**使用固定装置或老虎钳固定工件,会比 用手持握工件更牢固。
- ▶ 等待电动工具完全静止后才能够放下机器。机器上的 工具可能在工作中被夹住, 而令您无法控制电动工 具。
- **▶ 切勿打开蓄电池。**可能造成短路。



保护蓄电池免受高温 (例如长期日照),火 **焰,水和湿气的侵害。**有爆炸的危险。



- ▶ 如果蓄电池损坏了,或者未按照规定使用蓄电池,蓄 电池中会散发出有毒蒸汽。工作场所必须保持空气流 **通,如果身体有任何不适必须马上就医。**蓄电池散发 的蒸汽会刺激呼吸道。
- ▶ **本蓄电池只能配合博世的电动工具一起使用。**这样才 能确保蓄电池不会过载。
- ▶ 只能使用博世原厂的蓄电池。电池的电压必须和电动 **工具铭牌上规定的电压相符。**使用其他的蓄电池,例 如仿制品、经过改造或其它品牌的蓄电池,有受伤的 危险以及因为蓄电池爆炸而造成的财物损失。

进一步的安全规章和工作指示

▶ 含铅的颜料以及某些木材、矿物和金属的加工废尘有 害健康、可能造成过敏、让操作者感染 呼吸道疾病 和/或罹犯癌症。只有经过专业训练的人员才能够加 工含石棉的物料。





















中文 | 9





- 工作场所要保持空气流通。
 - 最好佩戴 P2 滤网等级的口罩。

请留心并遵守贵国和加工物料有关的法规。

- ▶ 避免让工作场所堆积过多的尘垢。尘埃容易被点燃。
- ▶ 维修电动工具、更换电动工具上的工具或者搬运电动工具时,务必把正逆转开关调整到中央的位置。如果不小心启动起停开关,可能造成伤害。
- ▶ 交货时蓄电池只完成部分充电,为了确保能够发挥电池的最大功率,首度使用前必须把蓄电池放入充电器中充足电。
- ► 蓄电池上安装了 NTC- 温度监控装置。当温度位在摄 氏 0°C 到 45°C 度间时,才能进行充电。所以能够 大大地延长蓄电 池的使用寿命。
- ▶ 阅读充电器的使用说明书。
- ▶ 确定电动工具已经关闭了,才可以把电动工具顶在螺 丝头上。转动中的起子头容易从螺丝头上滑开。
- ▶ 待电动工具完全静止后才能够启动选档开关。
- ▶ 必须把換档开关推到尽头,或者说把功能转换开关护转到尽头。如果无法把换档开关推到尽头,则要轻按起停开关。否则可能会损坏电动工具。

代表符号

以下的符号可以帮助您正确地使用本机器。请详细阅读 各符号及它们的代表意思。正确了解各符号所代表的意 思,可以帮助您更有把握更安全地操作本机器。

符号

含义

TSR 1080-LI/TSR 1440-LI/ TSR 1800-LI: 充电式电钻起子机 打上灰色记号的部位: 手柄(绝缘 的握持位置)



物品代码



阅读所有的安全规章和说明



在电动工具上进行任何维修的工作之前,都必须先取出蓄电池



请佩戴耳罩



移动方向

符号	含义
1	反应方向
	钻击和拧转螺丝
a de la companya de l	低转速
THE STATE OF THE S	高转速
I	开动
0	关闭
*	正/逆转功能
U	额定电压
n ₀ 1	空转转速(1档)
n ₀ 2	空转转速(2档)
М	根据 ISO 5393 的最大扭力
I	金属
	木材
Ø	最大钻孔直径
Ø	最大螺丝直径
	夹头的夹紧范围
i	重量符合 EPTA-Procedure 01/2003

供货范围

充电式电钻起子机。

蓄电池、安装在机器上的工具以及插图中或说明书中提 到的附件,并不包含在标准的供货范围中。

在本公司的附件清单中标列了完整的附件。

按照规定使用机器

本电动工具适用於拧入和拧出螺丝。本电动工具也可以 在木材、金属、陶器和塑料上钻孔。

技术数据

本产品的技术数据列在本使用说明书 11 页的表格中。

























安装和操作

执行目的	图片	页数
取出蓄电池	1	12
安装蓄电池	2	12
安装工具	3	12
改变转向	4	13
设定扭力	5	13
选择钻孔位置	6	14
机械式选档	7	14
开动 / 关闭	8	14
选择附件	-	15

维修和清洁

▶ 电动工具和通风间隙都必须保持清洁,这样才能够提 高工作品质和安全性。

顾客服务处和顾客咨询中心

本公司顾客服务处负责回答有关本公司产品的修理,维 护和备件的问题。以下的网页中有爆炸图和备件的资

www.bosch-pt.com

博世顾客咨询团队非常乐意为您解答有关购买, 使用和 设定本公司产品及附件的问题。

询问和订购备件时,务必提供机器铭牌上标示的 10 位 数物品代码。

有关保证,维修或更换零件事宜,请向合格的经销商查 询。

中国大陆

博世电动工具 (中国) 有限公司

中国 浙江省 杭州市

滨江区滨康路 567 号

邮政编码: 310052

免费服务热线: 400 826 8484

传真: +86 571 8777 4502

电邮: contact.ptcn@cn.bosch.com

www.bosch-pt.com.cn

羅伯特・博世有限公司

香港北角英皇道 625 號 21 樓

客戶服務熱線: +852 2101 0235

傳真: +852 2590 9762

電郵: info@hk.bosch.com 網站: www.bosch-pt.com.hk

制造商地址:

罗伯特博世有限公司

营业范围电动工具

邮箱号码 100156

70745 Leinfelden-Echterdingen (莱菲登 - 艾希德登)

Deutschland (德国)

搬运

随着机器一起供货的锂离子蓄电池必须受危险物品法规 范。使用者无须另外使用保护包装便可以运送该蓄电 池。

但是如果将它交由第三者运送 (例如: 寄空运或委托运 输公司)则要使用特殊的包装和标示。此时必须向危险 物品专家请教有关寄送危险物品的相关事宜。

确定蓄电池的外壳未受损后, 才可以寄送蓄电池。粘好 未加盖的触点并包装好蓄电池,不可以让蓄电池在包装 中晃动。

必要时也得注意各国有关的法规。

处理废弃物



必须以符合环保的方式,回收再利用损坏的电动工具,蓄电池,附件和废弃的包装材料。

不可以把电动工具和蓄电池/电池丢入一般的家庭垃圾 中!

保留修改权。









 


















		TSR 1080-LI	TSR 1080-LI	TSR 1440-LI	TSR 1440-LI	TSR 1800-LI
BOSCH XXXX XXX XXX						
		3 601 JA8 9	3 601 JA8 9	3 601 JA8 4	3 601 JA8 4	3 601 JA8 3
U	V=	10,8	14,4	10,8	14,4	18
n ₀ 1	min ⁻¹	0 – 400	0 - 400	0 - 320	0 - 420	0 - 400
n ₀ 2	min ⁻¹	0 - 1200	0 - 1200	0 - 1000	0 - 1400	0 - 1300
MA	Nm	27	27	27	30	34
M 💥	Nm	11	11	11	15	18
Ø 📆	mm	10	10	10	10	10
Ø 💥	mm	23	23	23	25	29
Ø	mm	6	6	6	7	8
	mm	0,8 - 10	0,8 - 10	0,8 - 10	0,8 - 10	0,8 - 10
•	kg	1,25	1,3	1,25	1,3	1,4


















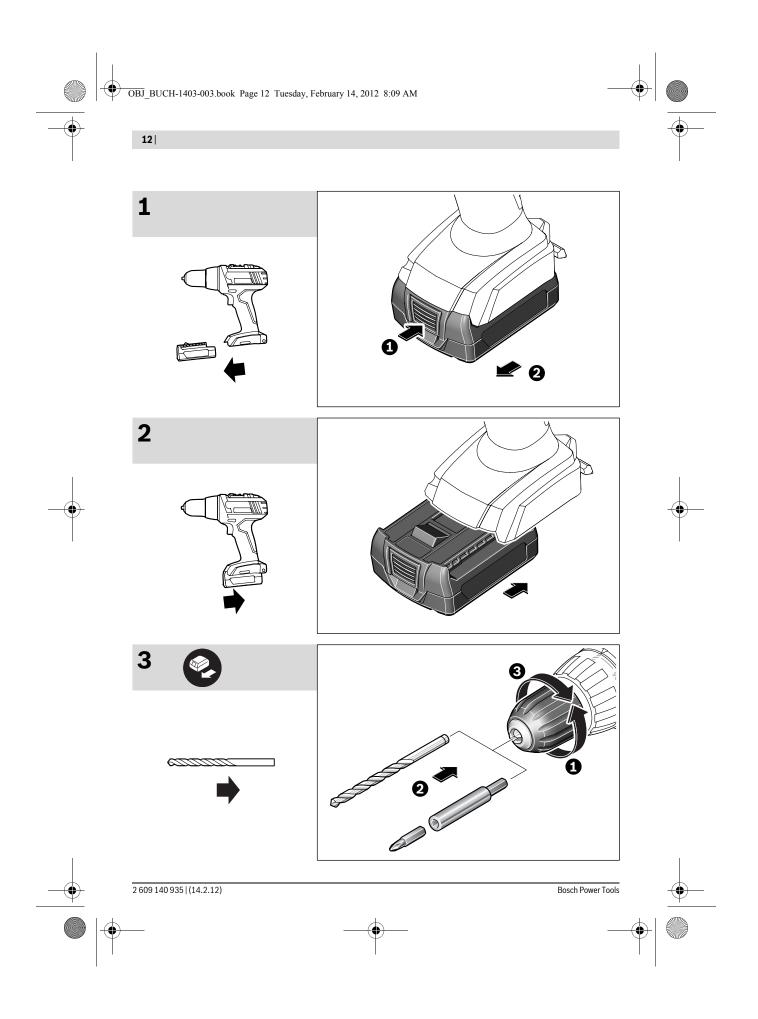

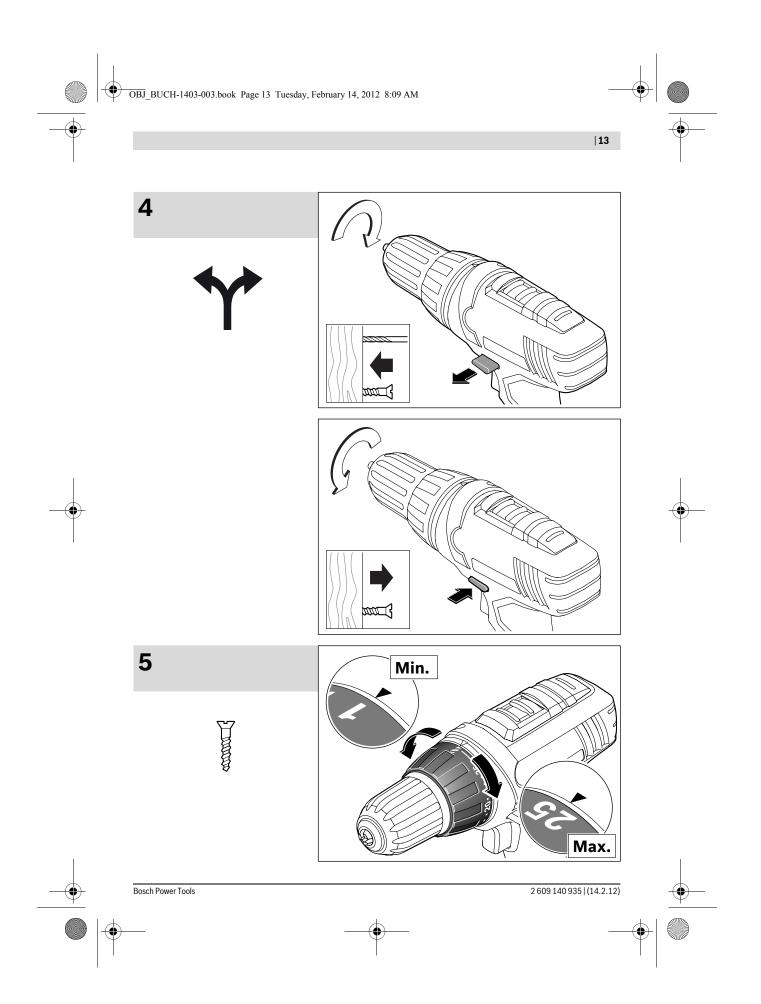

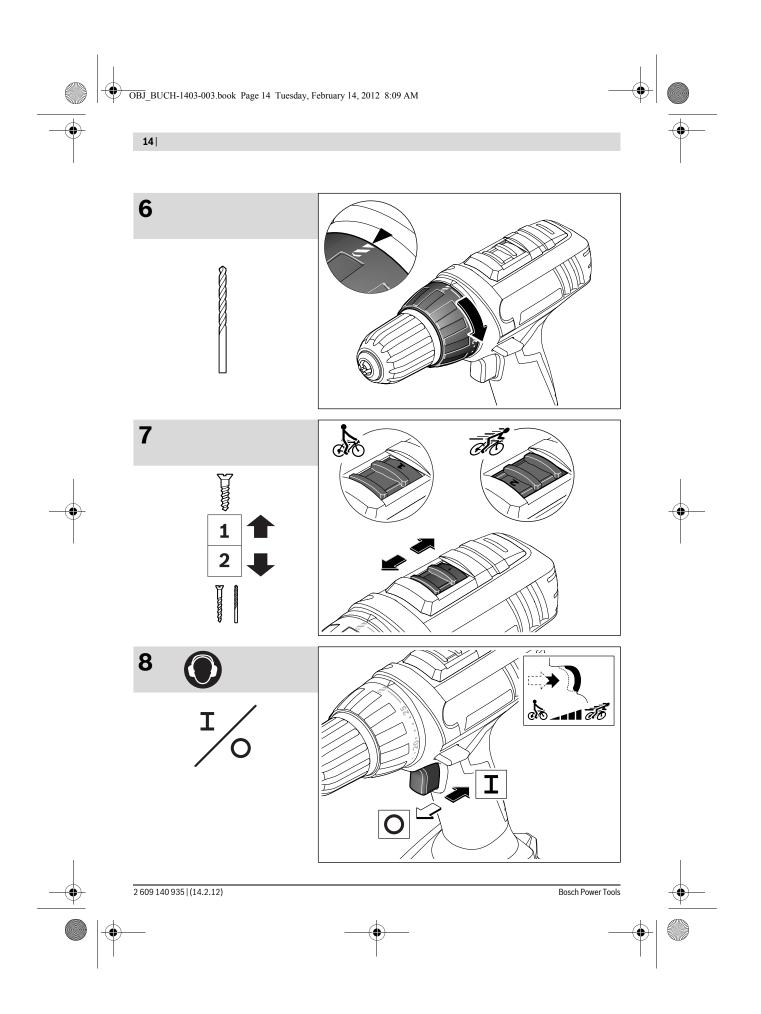













10,8 V (Li-lon)

2 607 336 600 (1,3 Ah)



14,4 V (Li-lon)

2 607 336 150 (1,3 Ah) 2 607 336 078 (2,6 Ah) 2 607 336 224 (3,0 Ah)



18 V (Li-lon)

2 607 336 170 (1,3 Ah) 2 607 336 092 (2,6 Ah) 2 607 336 236 (3,0 Ah)



AL 1820 CV (10,8 - 18 V)

2 607 225 424 (Far East, IN) 2 607 225 426 (HK, MY, SG) 2 607 225 436 (KR)



AL 1860 CV (10,8 - 18 V)

2 607 225 322 (Far East, IN) 2 607 225 324 (HK, MY, SG) 2 607 225 334 (KR)















